



Witteveen Projectinrichting  
Ouderkerk a/d Amstel  
Tel: 020 - 496 5030  
Fax: 020 - 496 3052  
info@witteveen.nl  
www.project-inrichting.nl  
www.ergonomics.nl

1. Make sure all electrical equipment is turned off.
  2. Plug in the eco-junction box to the wall socket.
  3. Turn the adjustable current threshold fully clockwise with a screwdriver.
  4. Plug in the CPU to the master socket. The green light-diode should ignite.
  5. Turn on the CPU.
  6. Turn the adjustable current threshold anti clockwise as far as it will go.  
Now, slowly turn it clockwise until the blue light-diode turns on.  
You have now adjusted the right current flow to optimize the energy saving system.
  7. Plug in the remaining equipment such as screen, printer, scanner etc.
  8. Turn on all equipment.
- When the CPU is off all the electrical appliances in the slave sockets will also turn off.
  - When the CPU is on all the electrical appliances in the slave sockets will also turn on.

## Please note!

- When changing CPU you will be required to reinstall the adjustable current threshold starting from step 1 – 8.